


# Dry layed screed

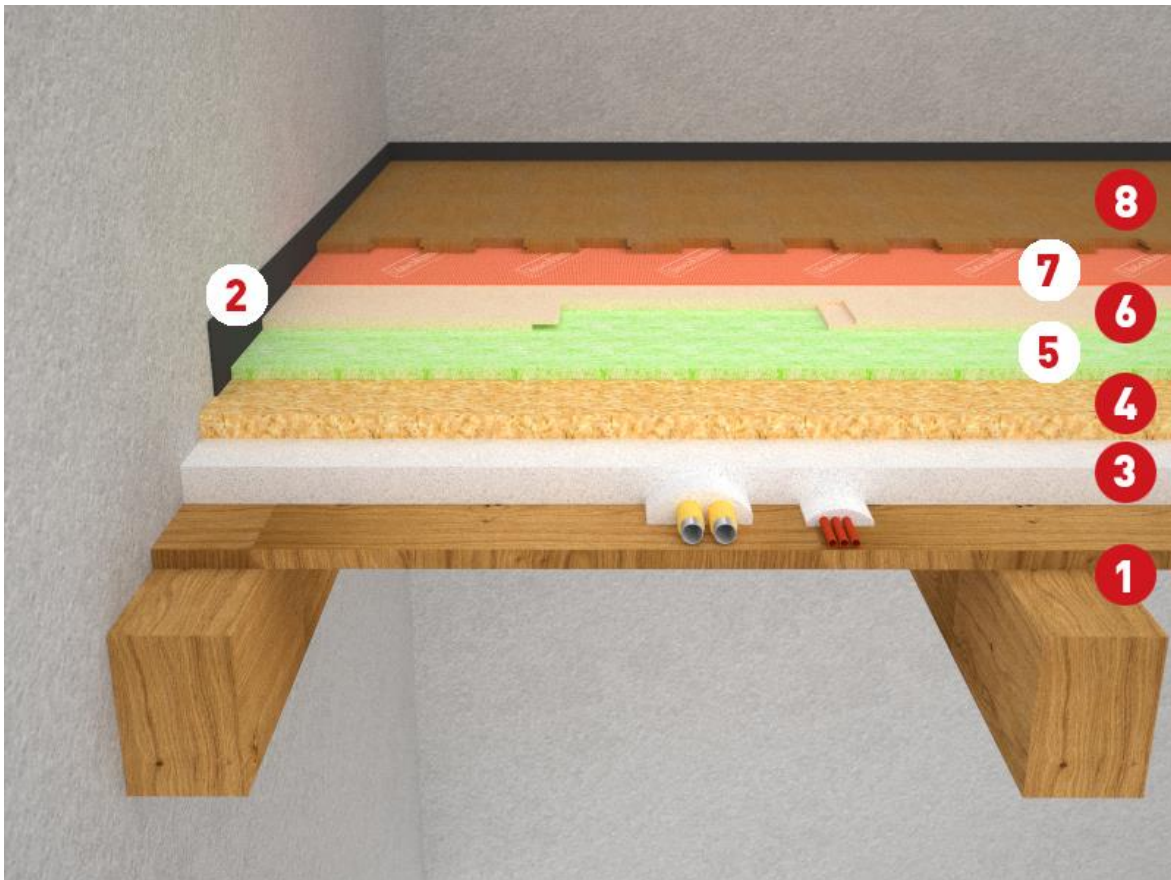

1. Floor slab
2. Fascia Perimetrale Isolmant (Stacca/attacca or Tecnica Reticolata)
3. Levelling layer
4. Gypsum fiber board or OSB panel
5. Resilinet mat Isolmant Fibra HD
6. Gypsum fiber board or OSB panel
7. Underlay (IsolDrum or IsolTile)
8. Floating wooden floor

## Description

The "dry screed" solution best fits the need for acoustic insulation, when lightness and ease of installation are required. Dry screed solution is realized with panels of Isolmant Fibra HD layed on the slab, or on a panel covering the grainy screed. A flooring panel is then lyied dry on Fibra HD, to create a robust floor. With a wholly dry installation process, Isolmant Fibra HD maximises on-site efficiency. The dry solution is often used in wooden houses, and in refurbished or restauration in historical buindings.